

Installation & User Guide

Dual-Flush Two Piece Toilet



Tools and Materials



10" Adjustable Wrench



Supply Shut-Off Valve



Tape Measure



 
Level



Sponge



Pipe Wrench



Tubing Cutter



Safety Glasses



Drill and assorted bits

Plus:

- Connector
- Metal File
- 1/2" Nut Driver/Socket
- Hacksaw
- Screwdriver

Thank You For Choosing Englefield

Thank You For Choosing Englefield. We appreciate your commitment to Englefield quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Englefield.

Before You Begin



CAUTION: Risk of personal injury or product damage. Handle with care. Vitreous china can break or chip if the product is handled carelessly.


- Carefully inspect the new toilet for damage.
- If the existing toilet does not have a supply shut-off valve below the cistern, install one before installing the new toilet.
- Install sufficient backing behind the finished wall to provide a secure material for the anchoring devices.

Installation


- 1** Remove the existing toilet: Turn off the water supply and flush the toilet, then sponge out all remaining water from the cistern. Disconnect the supply shut-off valve (if present), and remove the old pan and cistern.

CAUTION: Risk of hazardous gases. If the new toilet is not installed immediately, temporarily stuff a rag in the closet flange.

- 2** Define the position of connector: Place the connector onto the pan, position between outlet and waste pipe.

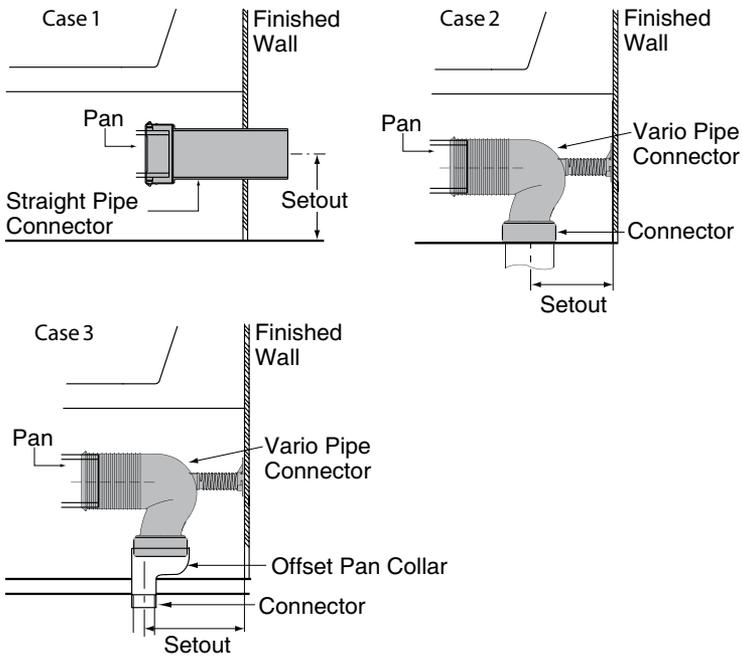


- 3** Mark the positions for the floor fixing kit holes. Use the template (if supplied).

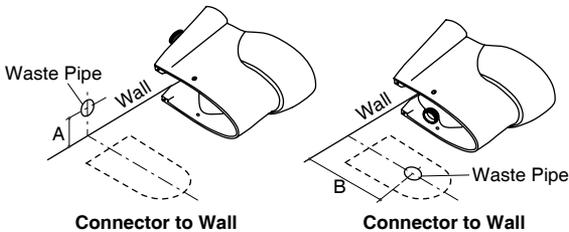

4 Floor Fixing -2 Methods


4.1 With Brackets

Drill 10 mm fixing holes at marked location on the floor and insert the anchors. Place a washer onto each of the hexagon screws and insert them into the brackets to the floor. Position the toilet in the marked position. Install the sleeves and, using screws, fix the toilet to the brackets. Attach the cap to the screw heads.

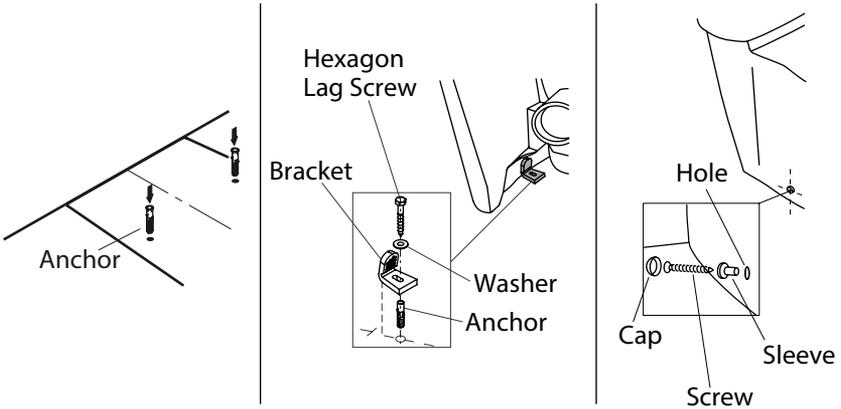

4.2 Screw


Place the toilet into the desired position. Place the protective plastic sleeve onto the drill bit and, using the anchoring holes in the toilet as your guide, drill 8 mm fixing holes in the floor. Place the anchors into the fixing holes through the toilet. Using the screws fix the toilet to the floor. Attach the caps to the screw heads.

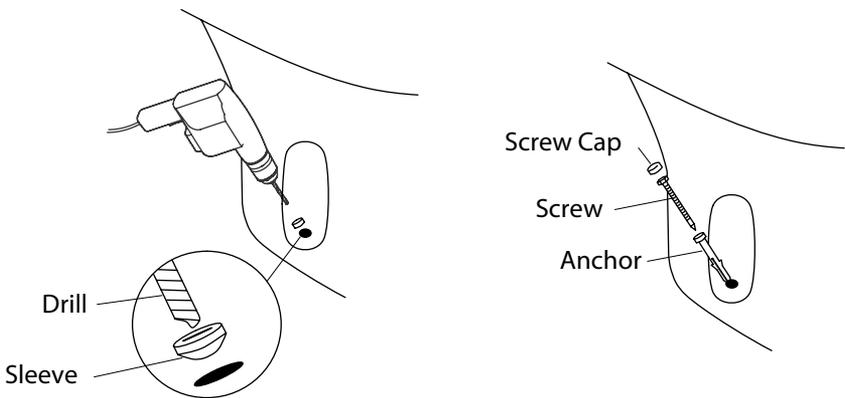

Tank Installation


1 Tank Information

Rear Water Inlet - Close Coupled

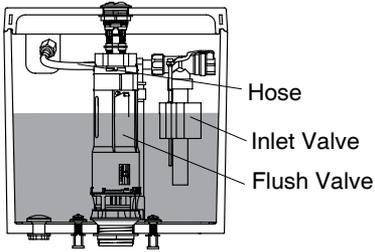


Models: Milano
Tuscano

Bottom Water Inlet - Close Coupled

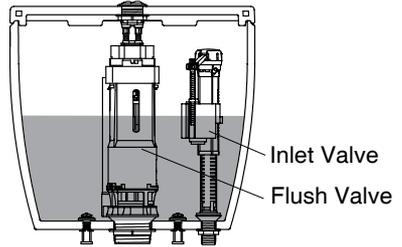

Models: Mirage
Delano
Ruby
Emerald
Valencia

Bottom Water Inlet - Conversion Kit (148794A-NA)

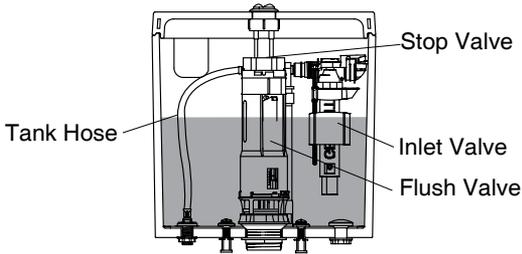

For use with models: Milano
Tuscano


Tank Fixing

2 All other tanks

Ensure the nut securing the flush valve is tight.

Position the tank on the pan by centering the gasket on the pan inlet. Assemble the retaining washer and sealing washer to the screw. Securely tighten the screw so the cistern is level.


* Optional for different products

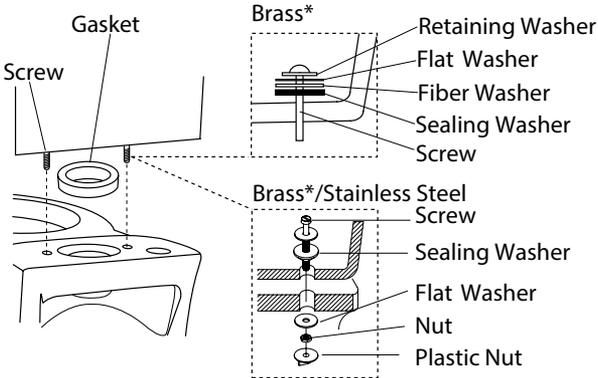

3 Connect the supply shut-off valve to the supply hose and connect supply hose to toilet supply shank.



Bottom Inlet Type

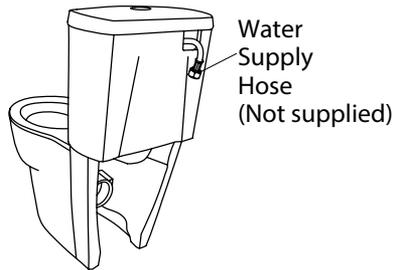

Rear Inlet Type


Toilet Seat Installation

1 *Install the seat as per the supplied seat instructions.*




Install the Push Buttons


1 *Disassemble the push rods.*

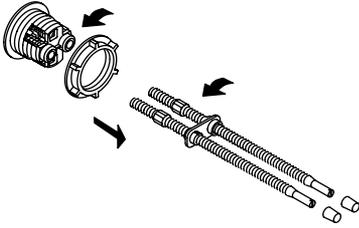


2 *Using the push rod, measure the distance between the flush valve and the top of the tank lid. Mark this length and cut the push rod to length.*

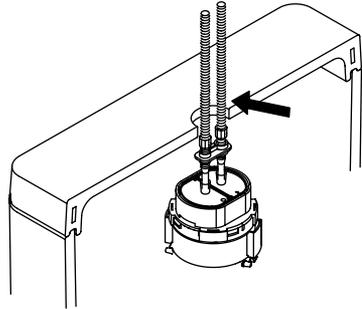

3 *Reassemble the push rods.*

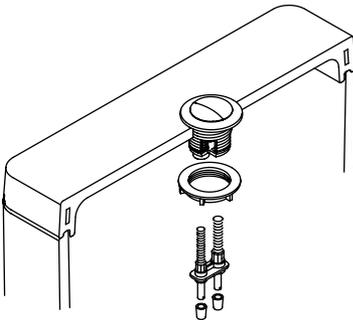


4 *Fit the lid and test the buttons. Adjust the rods as required.*

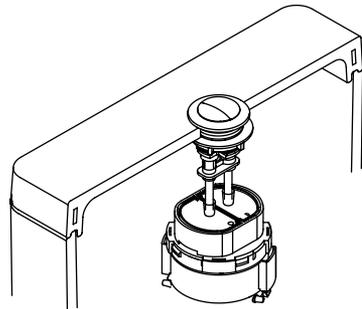


Install Flush Valve

Flush Valve A

1 Release flush valve by turning right and pulling straight up on the canister.

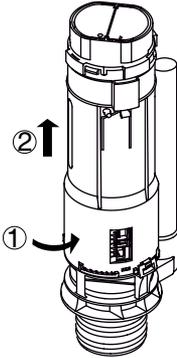


2 Assemble flush valve by pushing straight down into the canister and turning left.

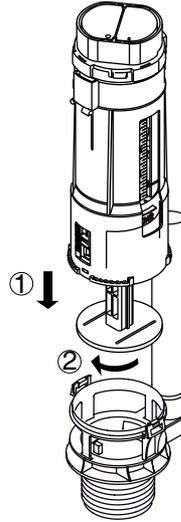


Flush Valve B

1 Release flush valve by squeezing the tabs on both sides of the canister and pulling straight up out of the flush valve.

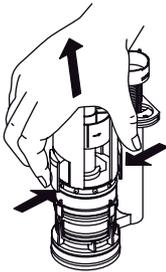

2 Assemble flush valve by pressing it into the flush valve base so it snaps into place.

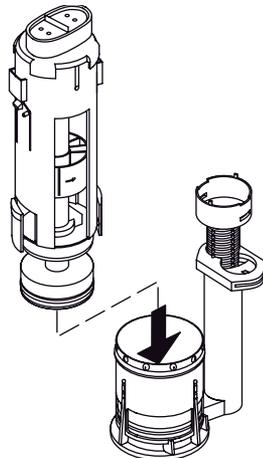

CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website

Australia

www.inglefield.com

New Zealand

www.inglefield.co.nz



CALL US FOR HELP

NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 100 382
Free Fax: 0800 664 488
www.inglefield.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 800 ENGLEFIELD
(1 800 364 533)
www.inglefield.com