

Important Installation Considerations

- 1. NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L/min may not allow the following to function correctly:
- _ some instantaneous water heaters
- _ some tempering valves
- _ some thermostatic mixing valves
- Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
- 3. When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with AS/NZS 3500 1.12 recommendation

Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to www.methven.com or call Customer Service

New Zealand 0800 804 222 Australia 1300 638 483 UK 0800 195 1602

439946 ISSUE A

SATINJET SHOWER SYSTEM INSTALLATION GUIDE

TECHNICAL SPECIFICATIONS

Min 150kPa, Max 500kPa.

Operating Pressure:

Recommended installation of a pressure limiting valve if supply exceeds 500kPa


Operating Temperature:

Recommended hot water supply 50°C, maximum 70°C. AS/NZS 3500 requires all hot water supplies to any sanitary fitting to be tempered to 50°C.

Inlet connections: All 1/2" BSP

Notes:


- After installation all connections must be checked for leaks.
- All installations must be carried out in compliance with relevant water regulations.

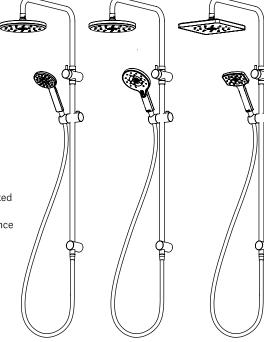




1.

WATER INLET: RECOMMENDED MINIMUM HEIGHT OF 1800mm FROM FLOOR LEVEL

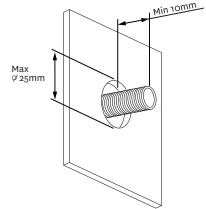


Install a $\frac{1}{2}$ " male threaded connection at the recommended height on wall, ensuring that a minimum of 10mm of thread protrudes past the finished wall.

2.

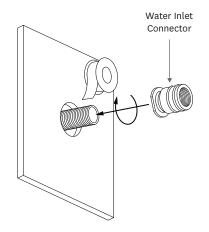


Apply thread tape (or similar) to the $\frac{1}{2}$ " connection, then screw the top rail connector to the connection.

3.

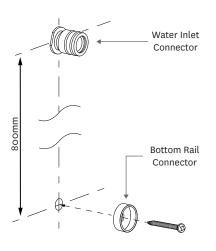


Screw the bottom rail connector to a wall stud making sure it is vertically in line with the top rail connector. Maximum centre distance between the top and bottom shower connections is 800mm.

4.

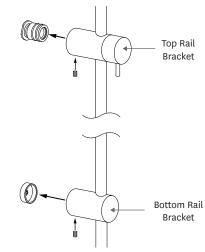


Check the grub screws are wound out. Push the rail brackets onto the top and bottom rail connectors until they are against wall. Secure with grub screws.

5.

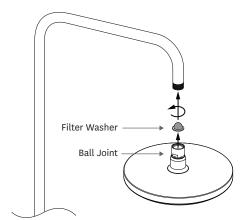

Remove the protective cap from the showerhead ball joint and screw the unit onto the overhead arm ensuring the filter washer is in place.

6.

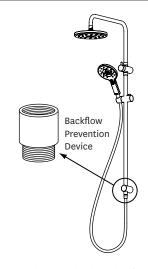

Make sure a washer is in both ends of the hose. Screw hose onto lower outlet on wet rail, attach handset and place firmly in holder. Tilt and rotate head to the desired position.

CLEANING

Never use abrasives or abrasive cleaning agents to clean this product. To clean the chrome-plated surface use contamination free warm soapy water and a damp soft cloth.

Lime deposits can be prevented from forming on the faceplate by wiping immediately after use.

Clean face plate using a brush with soft bristles.

Do not use any sharp objects to clean nozzles.

Clean filter washer located in the hose cone on the water outlet end, and in the overhead periodically.







Do not use any sharp objects to clean nozzles



