


**ALLPROOF**  
INDUSTRIES


STAINLESS STEEL  
**SHOWER  
CHANNELS  
AND TRAYS**

[www.allproof.co.nz](http://www.allproof.co.nz)




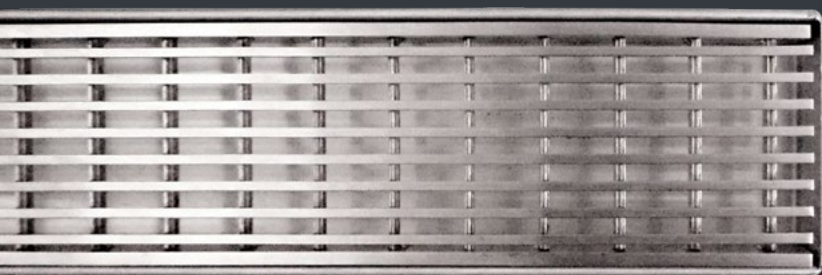

Equator (E)

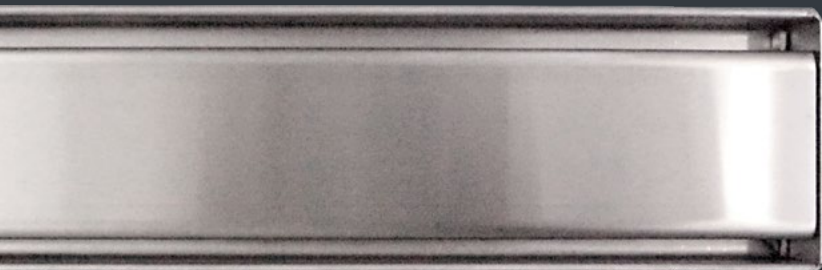

Horizon (H)

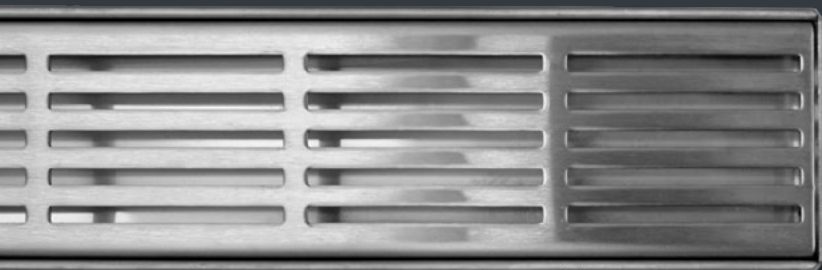

Vapour (V)



Sunrise (S)




Tile Insert (TI)

## THE VISION CHANNEL SERIES

The Vision series is an all stainless steel shower channel and grate system with a centre outlet, available off the shelf from Allproof. Vision shower channel kits include your choice of stainless steel grate and channel, a VF80 leak control flange and floor waste gully.

The Vision series is available in four stock lengths: 800, 900, 1000 and 1200mm. However, custom sizes are also available, please see opposite page.

TKV800 (H,E,S,V,TI)	800mm Vision Channel
TKV900 (H,E,S,V,TI)	900mm Vision Channel
TKV1000 (H,E,S,V,TI)	1000mm Vision Channel
TKV1200 (H,E,S,V,TI)	1200mm Vision Channel

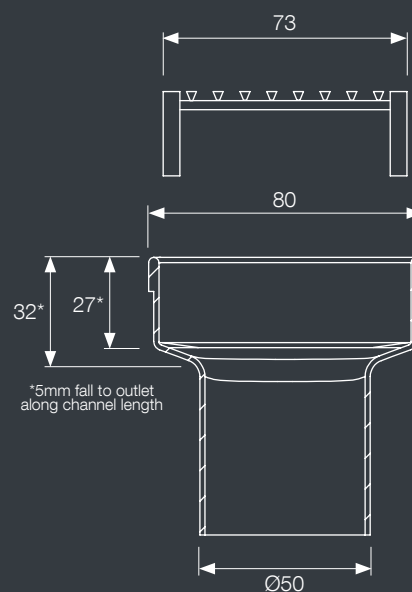

## CUSTOMISE YOUR VISION CHANNEL

We offer you the ability to customise the length of your shower channel. Custom grate lengths are available up to a maximum of two metres per individual grate.


Channels can be manufactured to any desired length within reason of logistical requirements. Maximum distance to outlet of 1500mm in any direction before additional outlets are required. It is recommended that there is one outlet for every shower head.

Download custom channel forms at [www.allproof.co.nz](http://www.allproof.co.nz)



## ADD SOME COLOUR

Speak to us about our Metal collection and powder coating options to give your shower channel that extra point of difference.

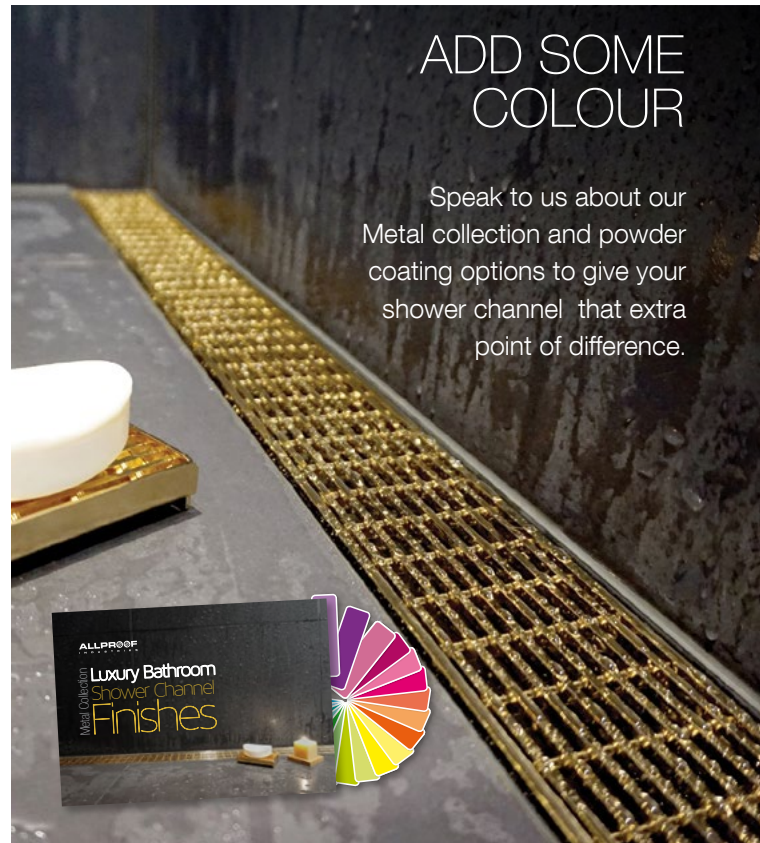



## SHOWER TRAYS

Allproof specialises in customised stainless steel shower trays for project specific applications where off the shelf trays may not be suitable. Utilising linear and point drain options, with a variety of wall and edge options, we can create the ideal solution for your installation.

### STAINLESS FINISH




### TILED OVER

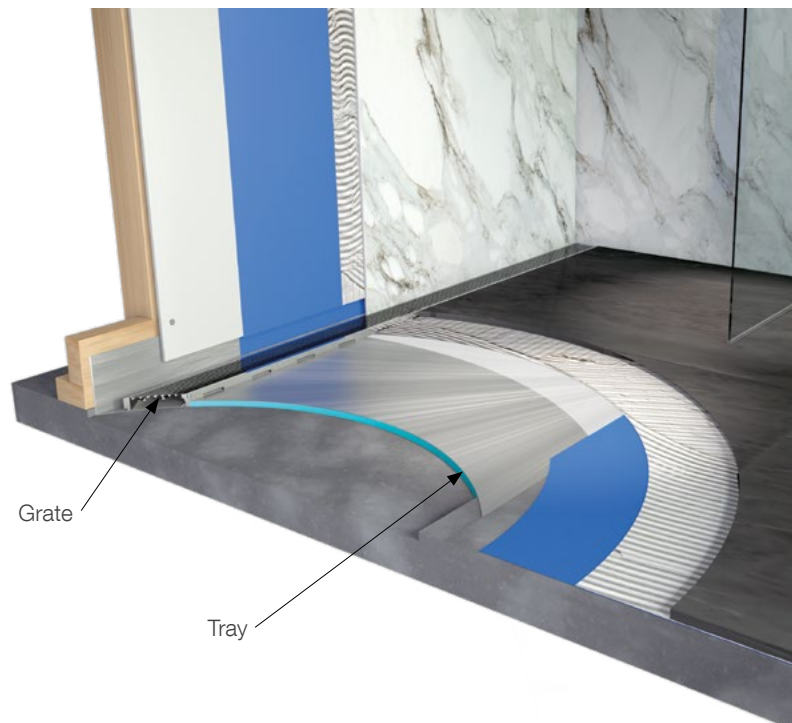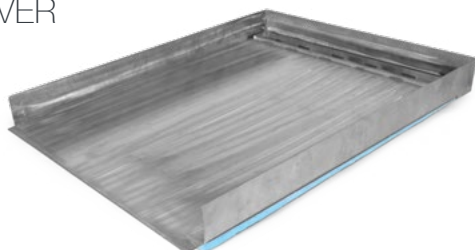


Download custom shower tray forms at [www.allproof.co.nz](http://www.allproof.co.nz)




# VISION INSTALLATION STEPS

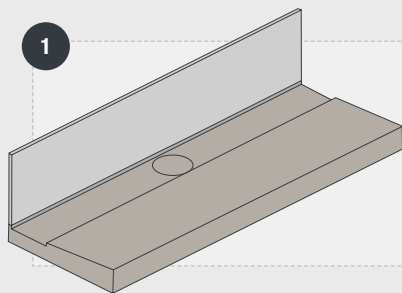


Builder to create recess 120mm wide and a minimum 20mm deep.

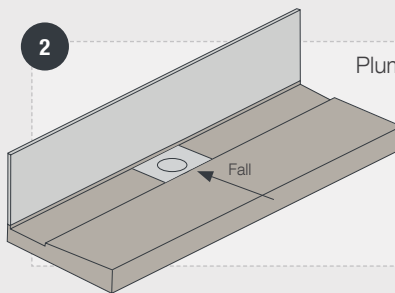


Plumber to rebate VF80 flange flush in bottom of trench. Set floor fall towards the channel as set out in AS3740-2010.

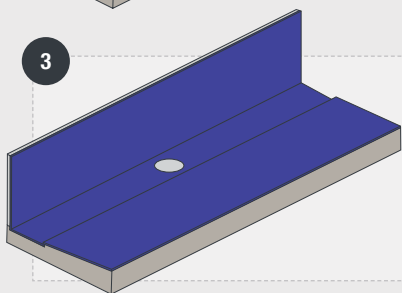

Waterproof to flange, completely 'tanking wet area.'

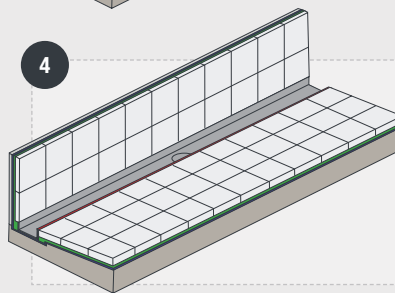

Tiler to install channel, leveling with a porous compound. Tile up to channel, install a bead of silicone between tiles and channel.

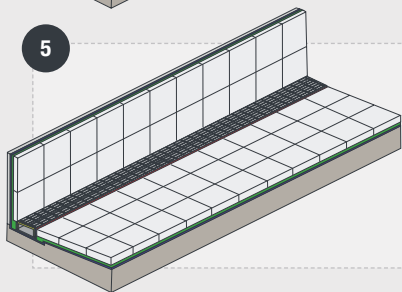

Install grate.

For more information please contact us:  
[www.allproof.co.nz](http://www.allproof.co.nz)

## DETAILS

