


INSTALLATION INSTRUCTIONS

progetto
DESIGN COLLECTION

COMO FLOOR MOUNT BATH FILLER & HANDSHOWER

C1500

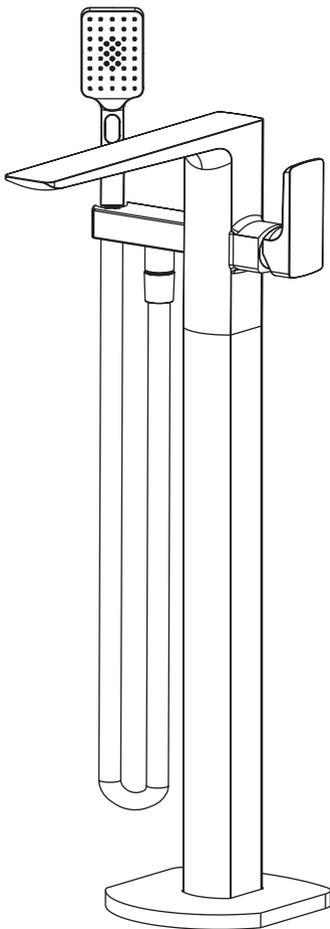

IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



Plumline

T 04 568 9898 E sales@plumline.co.nz
www.plumline.co.nz

RECOMMENDATIONS FOR INSTALLATION





ATTENTION: Failure to follow these recommendations may void the warranty. It is recommended that a qualified, licensed tradesperson install this product.



Water Pressure: 3 bar

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 4 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

Water Temperature: 45°-65°C

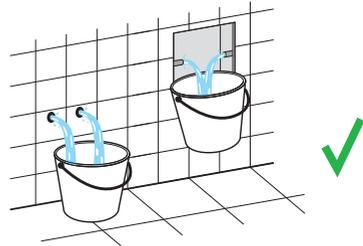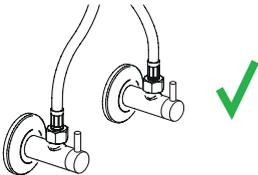


Stop Taps/Filters

Angle valves and/or filters are recommended to prevent impurities and debris entering the mixer.

Pre-Flush


Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

CLEANING & MAINTENANCE

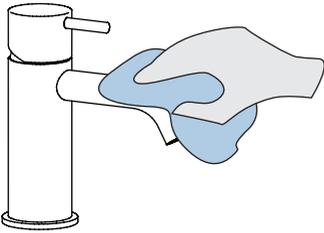


Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.

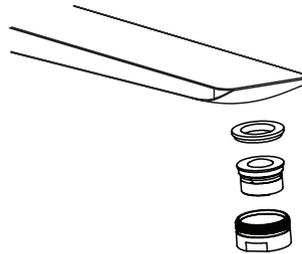

Aerator Maintenance

Remove the aerator with an aerator cartridge key. Immerse for half a day in water-vinegar solution (80-20%). Wash, then reassemble.

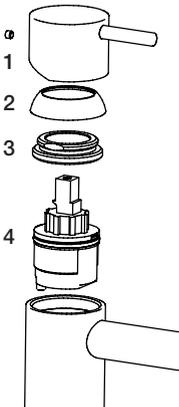


Cartridge Replacement

Before you start, turn off the water supply to the mixer.

1. Remove the handle
2. Unscrew the dome (hand tightened)
3. Unscrew the locking nut
4. Remove the cartridge

Re-assemble in reverse order



⚠ Max tightening torque on locking nut: 10-12 Nm

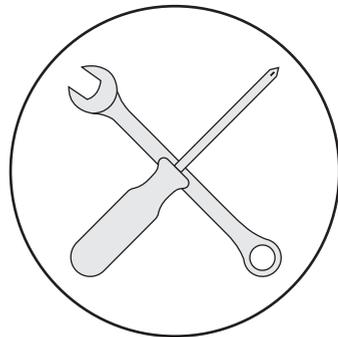

Warranty Information

For full details about our warranty visit plumbline.co.nz/warranty-information



No.	Name	Qty
1	Mixer Body	1
2	Flange	1
3	Mounting Plate	1
4	Underfloor Mounting Box	1
5	Inlet Elbow	2
6	Handshower	1
7	Check Valve	1
8	Flow Regulator	1
9	Shower Hose	1
10	Instruction Manual	1
11	Fixing Kit	1

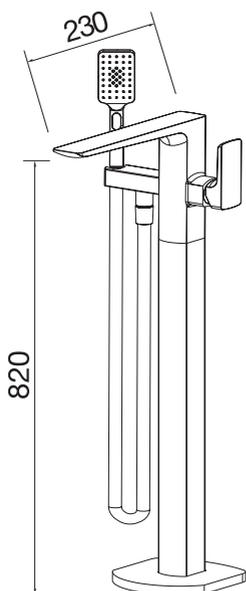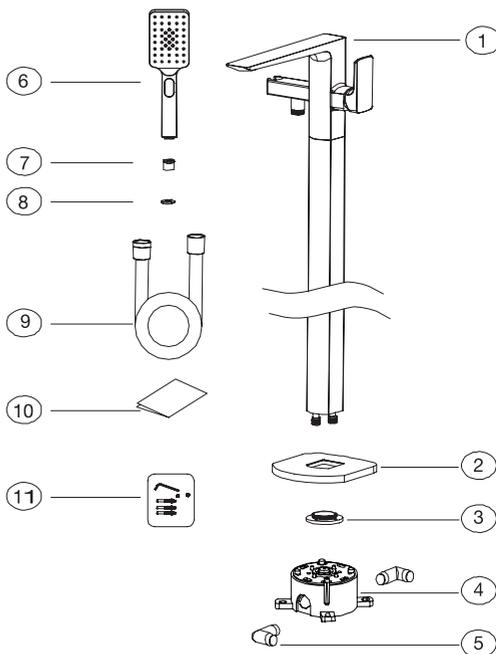


Prior to installation remove all parts from the packaging and inspect for any transport damage.

INSTALLATION INSTRUCTIONS


The Underfloor Mounting Box must be recessed into the floor and levelled (using the spirit level provided) as shown.

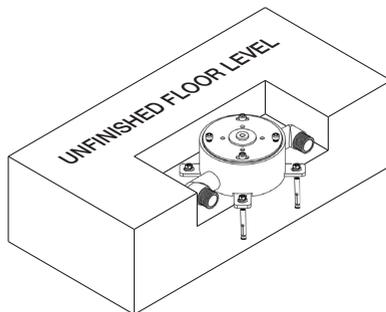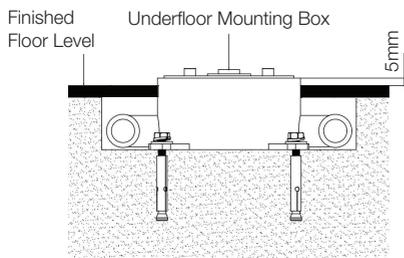

- 1 Slide the flange over the bottom part of the mixer body and attached the mounting plate to the underside of the mixer body.

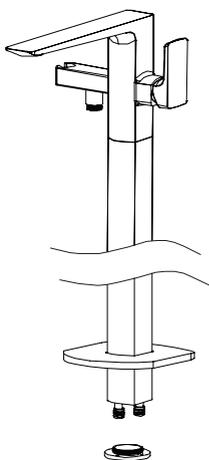


- 2 Drill the holes for mounting the Underfloor Mounting Box

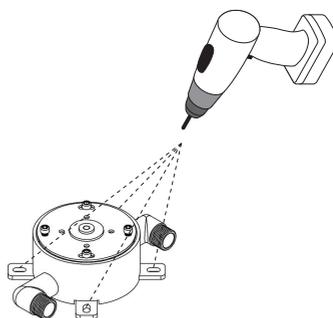


INSTALLATION INSTRUCTIONS

- 3 Wrap PTFE tape on the inlet elbows provided and screw them into the Underfloor Mounting Box.

Set the Underfloor Mounting Box into the recess in the floor and level using the spirit level provided.

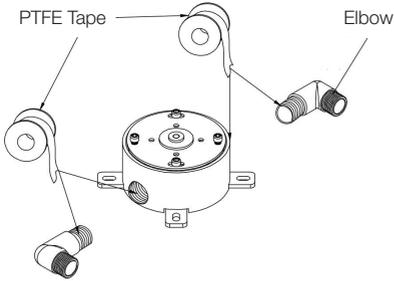


- 4 Fix the Underfloor Mounting Box to the floor with toggle bolts provided.

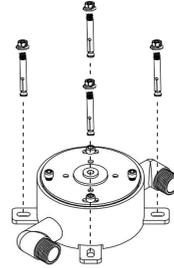


- 5 Connect the hot & cold inlet pipes to the inlet elbows.


⚠ Pressure test the whole unit before sealing the floor to ensure there are no leaks.

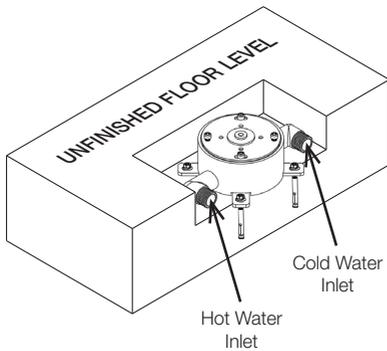


- 6 Complete the finished floor surface, ensuring the floor surface is finished up to the edge of the Underfloor Mounting Box.

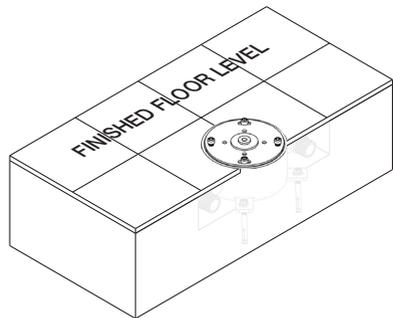


- 7 Remove the fixing plate, spirit level and blank cover caps.

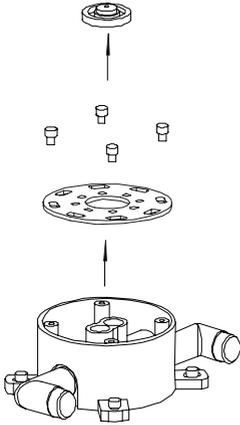


- 8 Fit the fixing plate onto the mounting plate (already attached to the Mixer Body in step 1).

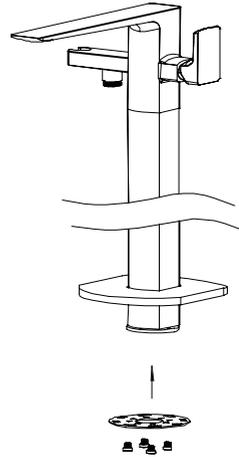


- 9 Align the copper pipes with the relevant hot & cold connector holes on the Underfloor Mounting Box. Fasten the fixing plate to the Underfloor Mounting Box.

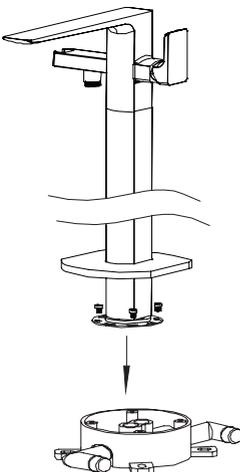

- 10 A check valve is pre-installed in the handshower. Connect flow regulator to the handshower if necessary.

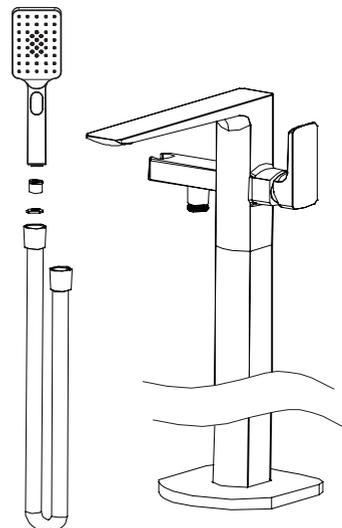

Handshower On

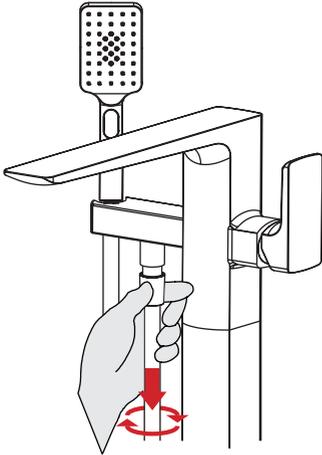

Handshower Off

