


INSTALLATION INSTRUCTIONS

PLUMBLINE 2 TIER SHOWER CADDY | SCC2
PLUMBLINE 3 TIER SHOWER CADDY | SCC3

plumbline
QUALITY BATHROOMWARE AND PLUMBING PRODUCTS

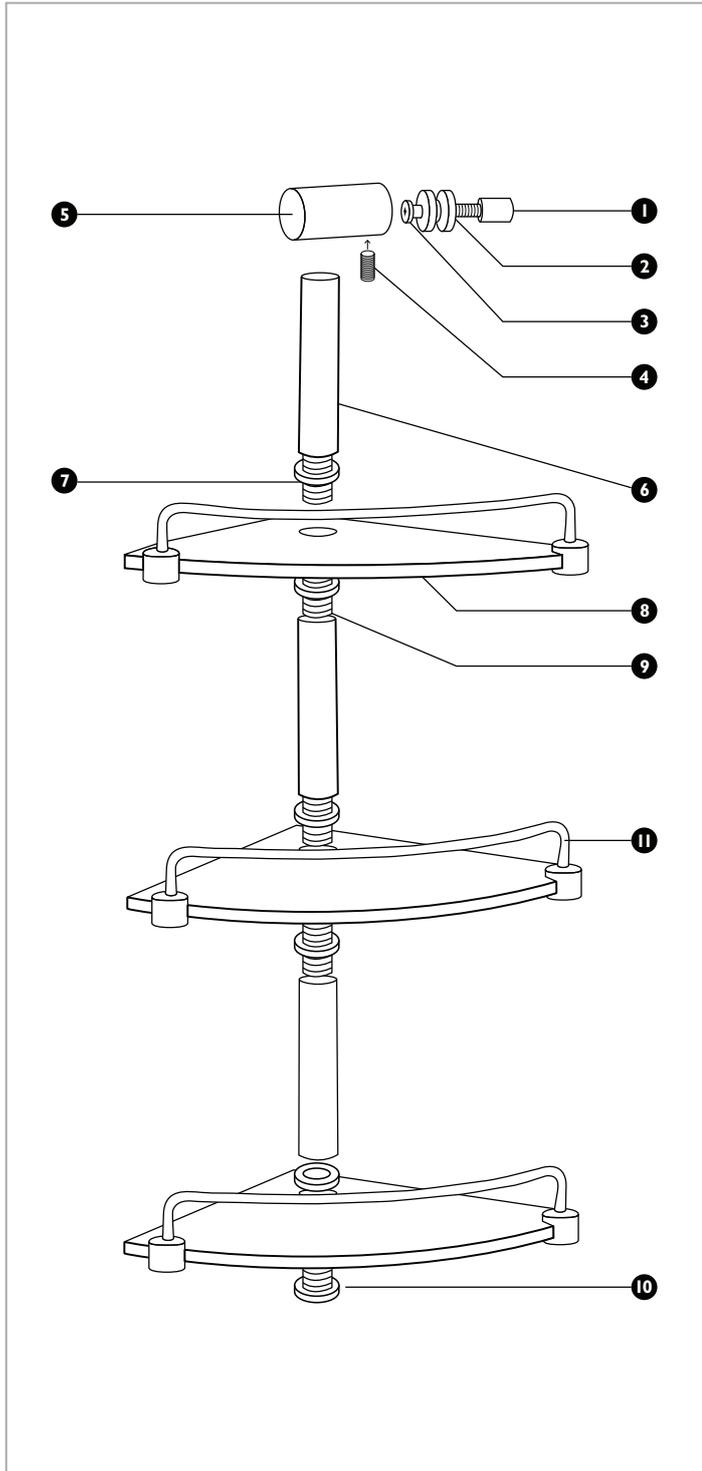

PARTS LIST

1. 1 x Wall Plug
 2. 1 x Fixing Ring
 3. 1 x Screw
 4. 1 x Fixing Grub Screw
 5. 1 x Fixing Rod
 6. Connection Rods
 7. Washers
 8. 2 or 3 Pieces of Glass (dependant on 2 shelf or 3 shelf)
 9. 1 x Connection Bolt
 10. 1 x Fixing Bolt
 11. 2 or 3 Sets of Protection Fence (dependant on 2 shelf or 3 shelf)
1. Assemble Shower Tidy as per diagram.
 2. Drill a 6mm hole in wall lining, insert the wall plug. Fasten the fixing ring on the wall with screw and then fasten the fixing rod to the fixing ring with the grub screw.
 3. Note: The weight on the shelf unit should not exceed 1.5kg.

NB: Specifications are subject to change without prior notice.