

INSTALLATION GUIDE


Designer II Feltonmix[™] Wallset WWSD2/CWSD2

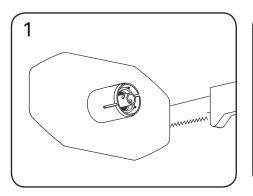

Cut an access hole in the wallboard. If fitting the anti-scald washer (optional), see overleaf for further instructions.

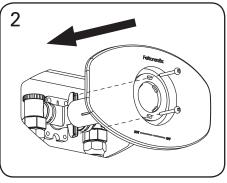


Position the wallplate over the valve outlet. Fit the two screws provided through each wallplate slot & into the valve body lugs. Tighten screws alternately - light pressure is sufficient to clamp the wallplate firmly to the wall.

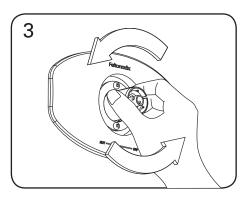


FELTON


Rotate slotted sleeve on valve body (projecting from central hole of wallplate) anti-clockwise.

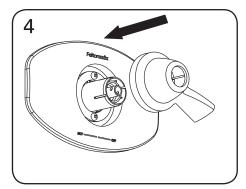


Fit handle to sleeve, locating at the 4 o'clock position.

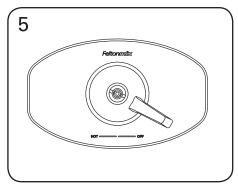


Handle should recess into the wallplate and match its contours. Ensure that the handle has about 10mm of engagement.

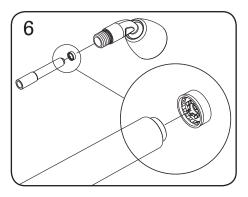

FOR EQUAL HIGH (MAINS) PRESSURE INSTALLATION, fit flow restrictor into showerhead with flow restrictor tool first.

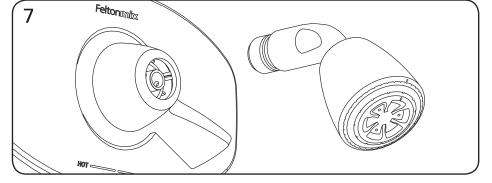

Screw showerhead into valve assembly - DO NOT OVERTIGHTEN. If necessary, unscrew showerhead part of a turn to bring it to the correct position. The o-ring seal fitted to the showerhead stem will ensure a watertight seal within 11/2 turns from fully tight. Do not use tape or hemp on the thread.

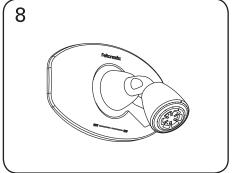


Check operation. Handle should swing from right to left from OFF to HOT. Total movement is about 130°.

For technical assistance please ring: 0800 743 358 or (09) 528 0810



The Perfect Shower Every Time

Instruction for fitting Anti-Scald Washer

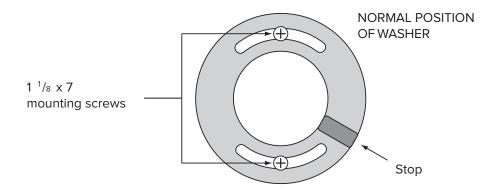

Refer to installation leaflet for Feltonmix Shower Mixing Valves.

Step 4 should read: Position the wallplate over the valve outlet. Position the anti-scald washer in the recess provided and secure by fitting the two $11/8 \times 7$ screws through the slots of the anti-scald washer and into the valve body lugs.

In normal cases, the fixing screws will be in the mid-slot position as shown above.

Tighten screws alternately until wallplate is firmly clamped to the wall. Warning: Do NOT overtighten.

To provide a warmer shower, loosen the two fixing screws, rotate the anti-scald washer slightly clockwise and re-fasten.

To provide a cooler shower, loosen the two fixing screws, rotate the anti-scald washer slightly counter-clockwise and re-fasten.

Felton Industries Limited