ALLPROOF
INDUSTRIES

revolver

COMPLETE WITH INTERNAL TRAP

WaterMark
WM 74706
AS2887

FEATURES

> Integrated puddle flange

> Squat 130mm install depth

> Grates to suit tile and vinyl applications

> Fully revolving outlet

> Simply solvent cement outlet to desired angle

THE PERFECT SOLUTION FOR VINYL AND TILE SHOWERS

Please note when ordering your kit that grates supplied are designed specifically for this product and not interchangeable.

GRATE OPTIONS

CHROME ON BRASS

100RC	100SC	CPV (For Vinyl)

STAINLESS STEEL KAITERI

KTSRSS	KTRDSS

STAINLESS STEEL ELEGANCE

SS0 - Wire	SS1 - Globe	SS2 - Cross	SS3 - Wave	SS4 - Quarter	SS5 - Straight	SS6 - Diagonal	SS7 - Plate	Elegance Invisidrain*

*Please consult your installer prior to selection to confirm dimensions

ALLPROOF
INDUSTRIES
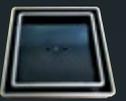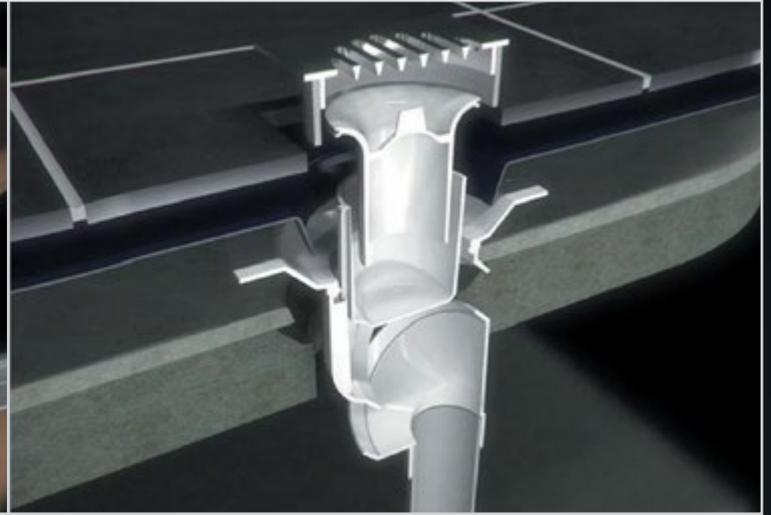

VINYL FEATURES

> Base features vinyl clamp ring

> Vinyl clamped using 3 x stainless steel screws

> Chrome on brass clamp ring/grate finishes flush with flooring

> Cam lock grate for easy access to waste without disturbing the vinyl

TILE FEATURES

> Base features 3 locating lugs for grate

> Locating lugs allow subtile moisture to escape through waste

> Flange area provides an excellent bonding surface for waterproofing membranes

> 10 quality grate options with easy cut height adjustable spigots

CODES	
REVSCPT	Revolver Easy Clean SQ CP TILE
REVRCPT	Revolver Easy Clean RD CP TILE
REVCPV	Revolver Easy Clean CP VINYL
REVINVSS	Revolver Elegance Invisidrain
REVSS0	Revolver Elegance Wire
REVSS1	Revolver Elegance Globe
REVSS2	Revolver Elegance Cross
REVSS3	Revolver Elegance Wave
REVSS4	Revolver Elegance Quarter
REVSS5	Revolver Elegance Straight
REVSS6	Revolver Elegance Diagonal
REVSS7	Revolver Elegance Plate
REVKTSRSS	Revolver Square Stainless Kaiteri
REVKTRDSS	Revolver Round Stainless Kaiteri
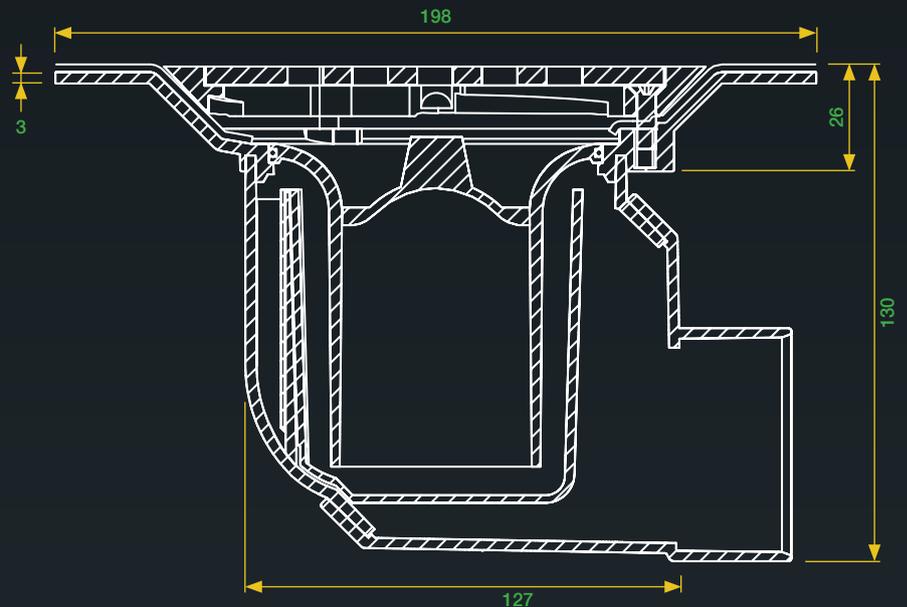
SCOPE OF USE

Installation is subject to the regulatory requirements of the plumbing Code of Australia associated to AS/NZS 3500.2.

> For drain, waste and vent use only

> Suitable for indoor use

> Material: ABS

> Jointing: Use uPVC solvent cement and primer for joins

> Test before concealing

> Ensure water trap can be removed for cleaning

www.allproof.com